
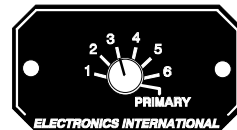


Primary TIT and CHT Instruments and Remote Switches Operating and Installation Instructions

OII 091294

9/12/94

You must read this manual before installing or operating the instrument. This manual contains warranty and other information that may affect your decision to install this product and/or the safety of your aircraft.

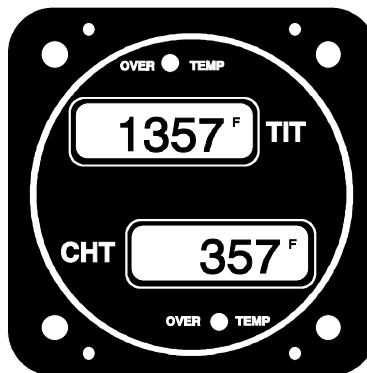

(This manual covers 12 instruments and remote switches)

(Supersedes OI 101461, II 121161, II 110361 and II 111361)
(FAA Approved)




Electronics International Inc. ®

2092 N.W. Aloclek #523 • Hillsboro OR 97124 • (503) 439-8484


Important Installation Information

0720921



👉 All steps must be read before installing a probe. 👉

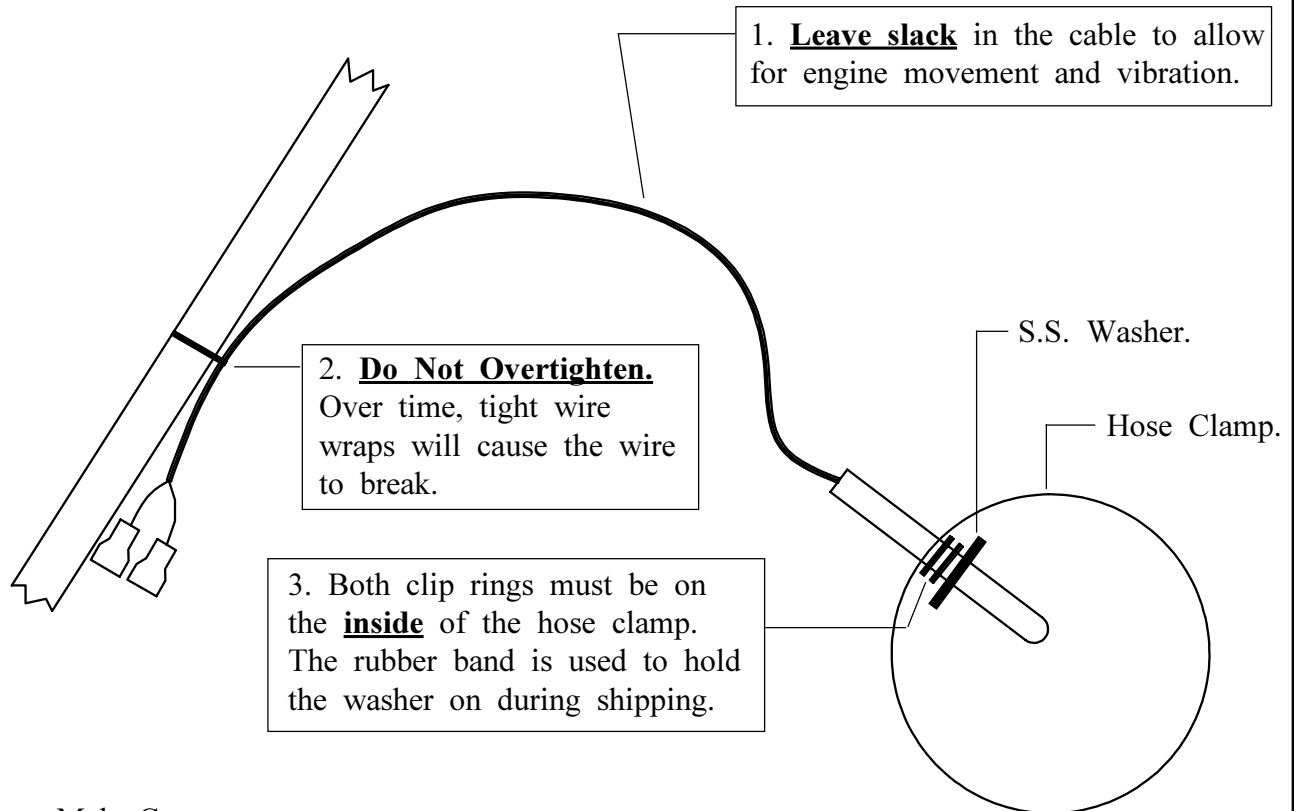

Male Conn.

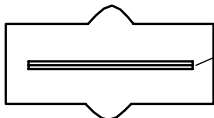

 4. The tab inside the male connector **must be centered** (not bent up or down) to mate properly. Check each connector before installation. **Two drops of oil on the connector will protect it from corrosion for many years.**

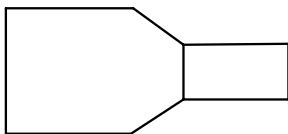

5. If you remove a connector, **double over the wire** before installing it into a new connector. Each connector must be double crimped very tightly.

6. If connectors have been disconnected several times the female connector may become loose. If this happens use a pair of needle nose pliers to **retighten the female receptacle** then mate the connectors.

Important Notice

***** MUST READ *****

If you think it is not important to read this manual, you're wrong! This manual contains important installation information that may affect the safety of your aircraft, delay your installation or affect the operation of your instrument. You Must read this manual prior to installing your instrument. Any deviation from these installation instructions is the sole responsibility of the installer/pilot and may render the STC invalid.

_____. There is information in the Warranty / Agreement that may alter your decision to install this product. _____
_____. This product may be returned for a refund. Contact Electronics International inc. for details.

Check that the instrument make and model marked on the side of the instrument and on the invoice are correct before starting the installation.

Check that the limit information on this instrument matches the published limits in your aircraft's P.O.H. or Flight Manual. Also, this information may be listed in the T.C. Data Sheet for your aircraft. Any AD's and/or STC's may set forth additional limitations on the operation of your engine. _____

It is possible for any instrument to fail thereby displaying inaccurate high, low or jumpy readings. Therefore, you must be able to recognize an instrument failure and you must be proficient in operating your aircraft safely in spite of an instrument failure. If you do not have this knowledge, contact the FAA or a local flight instructor for training.

The ability for this product to detect a problem is directly related to the pilots ability to program proper limits and the pilots interpretation and observation skills.

The pilot _____ understand the operation of this product before flying the aircraft. Do not allow anyone to operate the aircraft that does not know the operation of this product. _____

Contents

Warranty -----	2
Operating Instructions: -----	3
Features -----	3
TIT -----	4
EGT's -----	6
CHT's -----	7
Installation Instructions: -----	10
1. Important Information and Initial Check Out -----	10
2. CHT Probe Installation -----	11
3. TIT Probe Installation -----	11
4. EGT Probe Installation -----	11
5. Route the Extension Cables -----	12
6. Hook Up Connecting Wires -----	13
7. Connect and Install the Instrument and/or Remote Switch -----	13
8. System Ground Test -----	13
Troubleshooting Suggestions -----	14
1. Instrument Check Out -----	14
2. Probe Check Out -----	15
3. Extension Cable Check Out -----	15
Specifications and Operating Features -----	16
Instrument Wiring Diagrams -----	17
Remote Switch Connected to a Primary TIT Channel -----	18
Remote Switch Connected to a Primary CHT Channel -----	19
STC Information -----	20

Warranty / Agreement

Electronics International Inc. warrants this instrument and system components to be free from defects in materials and workmanship for a period of one year from the user invoice date. Electronics International Inc. will repair or replace any item under the terms of this Warranty provided the item is returned to the factory prepaid.

1. This Warranty shall not apply to any product that has been repaired or altered by any person other than Electronics International Inc., or that has been subjected to misuse, accident, incorrect wiring, negligence, improper or unprofessional assembly or improper installation by any person. This warranty does not cover any reimbursement for any person's time for installation, removal, assembly or repair. Electronics International retains the right to determine the reason or cause for warranty repair.
2. This warranty does not extend to any machine, vehicle, boat, aircraft or any other device to which the Electronics International Inc. product may be connected, attached, interconnected or used in conjunction with in any way.
3. The obligation assumed by Electronics International Inc. under this warranty is limited to repair, replacement or refund of the product, at the sole discretion of Electronics International Inc.
4. Electronics International Inc. is not liable for expenses incurred by the customer or installer due to factory updates, modifications, improvements, upgrades, changes, or any other alterations to the product that may affect the form, fit, function or operation of the product.
5. Personal injury or property damage do to misinterpretation or lack of understanding this product is solely the pilots responsibility. The pilot ____ understand the operation of this product before flying the aircraft. Do not allow anyone to operate the aircraft that does not know the operation of this product. Keep the Operating Manual in the aircraft at all times.
6. E. I. Inc. is not responsible for shipping charges or damages incurred under this Warranty.
7. No representative is authorized to assume any other liability for Electronics International Inc. in connection with the sale of Electronics International Inc. products.
8. If you do not agree to and accept the terms of this warranty, you may return the product for a refund.

This Warranty is made only to the original user. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES OR OBLIGATIONS: EXPRESS OR IMPLIED. MANUFACTURER EXPRESSLY DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. PURCHASER AGREES THAT IN NO EVENT SHALL MANUFACTURER BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING LOST PROFITS OR LOSS OF USE OR OTHER ECONOMIC LOSS. EXCEPT AS EXPRESSLY PROVIDED HEREIN, MANUFACTURER DISCLAIMS ALL OTHER LIABILITY TO PURCHASER OR ANY OTHER PERSON IN CONNECTION WITH THE USE OR PERFORMANCE OF MANUFACTURER'S PRODUCTS, INCLUDING SPECIFICALLY LIABILITY IN TORT.

OPERATING INSTRUCTIONS

Features

1. Instruments:

The Electronics International line of primary TIT/CHT instruments offer the following features:

A. The digital display allows you to read absolute temperatures at a glance. It does not require interpretation of dials or tic marks. In a short period of time you will become familiar with the normal operating temperatures of your engine. Abnormal temperatures will be easy to spot. The digital display is easily viewable in direct sunlight. If the instrument backlight has been permanently powered up (as recommended), the digital display will be easier to see during low ambient light conditions and at night.

Over the digital display is a warning light that will turn on any time the temperature exceeds the maximum operating temperature limit indicated on the front of the instrument. Also, there is a control line that may be used to turn on Electronics International's AL-1 remote mounted warning light. During power-up the warning lights will flash. This indicates the light and over-temp circuitry is operating properly.

The digital display resolves temperatures to 1 degree. This allows you to interpret trends quickly. This can be very helpful in diagnosing problems and leaning your engine. Also, any unit may be ordered to display in degrees F or degrees C.

Electronics International Instruments are not affected by shake, shock, vibration, tilt, stick-slip, bearing wear, spring wear, lead resistance, probe resistance, magnetic fields or the many other factors that plague analog instrument accuracy. All E.I. instruments are temperature compensated to read cabin temperature when a probe is disconnected. E.I. instruments should never need recalibration.

Electronics International instruments are compatible with any type K ungrounded probe. Lead resistance does not affect the accuracy of these instruments. You may use any length extension cable between the unit and the probe without affecting the accuracy of the instrument.

Any single channel TIT and/or CHT unit may be upgraded to a full multi-channel analyzer by simply adding a Primary Remote Switch to the system. The instruments, remote switches, extension cables and probes were designed in a modular fashion with slip-on connectors. This means a remote switch may be added to your existing system by simply mounting it into your instrument panel, installing the additional wires and probes and plugging it in. You do not have to buy a new system to upgrade to a full analyzer.

2. Primary Remote Switches:

A Primary Remote Switch may be connected to a TIT channel on any appropriate Electronics International Instrument. This gives the TIT instrument multi-channel EGT capability. Only the TIT or any EGT cylinder may be displayed on a Primary TIT instrument. The channel marked "Primary" on the remote switch is used to display TIT.

A Primary Remote Switch may be connected to a CHT channel on any appropriate Electronics International Instrument. This gives the CHT instrument multi-channel CHT capability. Only CHT's may be displayed on a Primary CHT Instrument. The channel marked "Primary" on the remote switch is used to display the primary CHT cylinder (i.e., if cylinder number 3 is the primary CHT cylinder for your engine, cylinder 3 will be displayed on the CHT instrument when the remote switch is set to the channel marked "3" or the channel marked "Primary").

Note: _____

TIT

1. Maximum Operation TIT Limit (Red Line):

Do not operate your engine above the Maximum Operating Temperature Limit as indicated on the front of this instrument. Operating above TIT Red Line can cause turbine housing and component failures, detonation or preignition (which will destroy engine and turbine components), loss of engine power, reduced turbocharger and engine life and can cause a fire hazard. It is essential to operate your engine within its TIT operating limits. Electronics International's TIT instruments give you three mechanisms to detect an over-temperature limit (Red Line) condition.

The Large Digital Display gives you a fast and very accurate indication of your current temperature condition. This instrument will display temperatures from ambient to 1999°F in 1°F increments. This also allows you to interpret rate and trend information at a glance.

This instrument incorporates an Over-Temperature Warning Light. This light will come on any time the TIT is above the Maximum Operating Temperature Limit as indicated on the front of this instrument. This light provides the advantage of catching your attention without your having to scan or interpret the display.

This instrument also comes with an External Warning Control Line. This line can be connected to an external light in a control panel or mounted in front of the pilot. This control line will turn on the external light any time the TIT exceeds the Maximum Operating Temperature Limit as indicated on the front of this instrument.

2. Using the TIT Instrument to Lean Your Engine:

You will want to lean your engine in cruise. A rich running engine wastes fuel needlessly and tends to run on the rough side. This create vibration, which causes deterioration of engine accessories and engine mounts. Also, proper leaning at cruise and during descent means less spark plug fouling, longer life for the plugs, reduced maintenance costs and considerable fuel savings. Furthermore, good leaning techniques result in cleaner combustion chambers with fewer lead salt deposits on the pistons and exhaust valves. Under certain conditions, these deposits invite preignition and higher maintenance costs. Proper leaning at cruise during cool or cold weather aids in raising engine and oil temperatures to desirable minimums in order to evaporate the water and acids out of the oil. Water and acids attack the insides of an engine, causing rust and corrosion.

The TIT is a collection of the EGT's for all the cylinders. As you lean the engine, one cylinder will reach peak EGT before the others. As you continue to lean, the EGT for the leanest cylinder will decrease in temperature but the TIT will continue to increase. When the combined total of all the increasing cylinders equals all the decreasing cylinders, the TIT will reach peak. For this reason, using a TIT to lean an engine is not as desirable as using a multi-channel EGT instrument. But, if you must lean the engine using only the TIT, perform the following steps:

Adjust the mixture control from the full rich position to a leaner setting that results in a slight drop in engine RPM or to a setting near peak TIT, as dictated by experience. The mixture control should be left at this setting until the TIT stabilizes. It will take about 20 seconds for the temperatures to stabilize within 1`F. This lag is due to the combustion walls and piston domes increasing in temperature, which affect the combustion and exhaust gas temperatures. _____
_____. Less sensitive instruments will not pick up these subtle changes, which are important in leaning and diagnosing problems.

Again, start leaning, making only very small adjustments and waiting 3 to 5 seconds between adjustments. As you approach peak, the exhaust gas temperature will rise much slower until it starts to decrease. When this happens you have reached peak TIT. The 1`F resolution of the digital display will be invaluable in helping you precisely detect peak TIT. If your engine runs rough before peak TIT is reached, note the temperature reading on the TIT instrument. When an engine starts to run rough (not when it loses power, but actually runs rough) the leanest cylinder has gone past peak EGT by 30 to 50 degrees F. The leanest cylinder is lean misfiring causing the engine to run rough. From this point enrichen the mixture to obtain a 50 degrees F lower TIT from the noted temperature. This will set the leanest cylinder slightly on the rich side of peak EGT. The rest of the cylinders will be running richer than the leanest by an amount dectated by the temperature spread for your engine. With this method you can reasonably lean an engine with the TIT instrument.

_____ The richer mixture is needed to cool the combustion temperatures and keep the anti-knock capability of the fuel high enough to prevent detonation from occurring at the higher power settings.

EGT's

1. Using an EGT Analyzer to Lean Your Engine:

To properly lean your engine, _____ perform the following steps:

Select the hottest EGT cylinder. Adjust the mixture control from the full rich position to a leaner setting that results in a slight drop in engine RPM or to a setting near peak EGT, as dictated by experience. The mixture control should be left at this setting until the EGT's stabilize. It will take about 20 seconds for the temperatures to stabilize within 1°F. This lag is due to the combustion walls and piston domes increasing in temperature, which affect the combustion and exhaust gas temperatures. _____. Less sensitive gauges will not pick up these subtle changes, which are important in leaning and diagnosing problems.

Again select the hottest EGT cylinder. This cylinder may be different than the one you started with. This is the cylinder on which you should perform your precision leaning. Again, start leaning, making only very small adjustments and waiting 3 to 5 seconds between adjustments. As you approach peak, the exhaust gas temperature will rise much slower until it starts to decrease. When this happens you have reached peak EGT. The 1°F resolution of the digital display will be invaluable in helping you precisely detect peak EGT.

For most engines Step B (Precision Leaning) will result in a properly leaned engine. If you find this to be the case with your engine, this step will not be necessary. But if you want to verify that you have leaned to the cylinder that peaked first and your engine is operating properly, perform the following with the cylinder found in step B at peak EGT: Slightly enrich the mixture and quickly step through each cylinder. Any cylinder that shows a rising temperature is a leaner cylinder. Check that this cylinder does not rise more than 15°F before it starts decreasing in temperature. If a cylinder rises more than 15°F it may have a problem.

2. EGT Diagnostics:

Since the EGT is directly related to the combustion temperature, it is an indication of the engine's ability to produce power. If the engine is not producing the correct amount of power, the EGT instrument can be a very valuable troubleshooting tool as well as an early warning system before engine failure occurs. With 1°F resolution, our digital EGT instruments will react to the slightest changes in the combustion process. To detect a problem, become familiar with your engine's normal EGT readings during run-up, climb, cruise and descent. Any difference from the norm can be a sign of trouble.

During normal operation the EGT will stabilize to 1°F for a given throttle and mixture setting. If it does not stabilize, this can also be the first sign of trouble. With rate and trend information being displayed instantaneously and with temperatures being read to 1°F, few problems can escape the pilot flying one of Electronics International's analyzer systems.

It is not necessary to continually monitor the EGT's in order to detect a problem. Most problems worsen over a period of time and can be easily detected before they become a safety hazard by thoroughly checking the EGT readings at run-up and once or twice during a flight.

The following is a list of EGT/CHT symptoms and possible problems:

<u>Symptom</u>	<u>Possible Problem</u>
One EGT reads abnormally high. The corresponding CHT reads lower than normal.	— Burned valve or broken ring, defective plug, plug wire or mag.
One EGT reads abnormally high. The corresponding CHT reads higher than normal.	— Plugged injector, intake leak.
One EGT reads abnormally low.	— Over-sized injector, restricted exhaust, broken or leaky exhaust header.
High CHT's and/or high EGT's on all cylinders.	— Excessive leaning with power settings over 75%. Detonation due to bad fuel. Closed or restricted cowl flaps. Missing or loose baffling.
High EGT's and/or low CHT's on all channels.	— Timing problem or defective mag.
Jumpy readings on one channel.	— This is not an engine problem. Check all connections and the probe for proper operation. See Troubleshooting Section of this manual.

CHT 's

1. Maximum CHT Operating Limit (Red Line):

Do not operate your engine above the Maximum Operating Temperature Limit indicated on the front of this instrument. Operating above CHT Red Line can destroy plugs, burn and warp valves, cause detonation or preignition (which can destroy engine components), cause extensive wear on bearing surfaces, cause loss of power, and much more. It is essential to operate your engine within its CHT operating limits. Electronics International's CHT instruments give you three mechanisms to detect an over-temperature limit (Red Line) condition.

The Large Digital Display gives you a fast and very accurate indication of your current temperature condition. This unit will display temperatures from ambient to 1999°F in 1°F increments. This also allows you to interpret rate and trend information at a glance.

This unit incorporates an Over-Temp Warning Light. This light will come on any time the CHT is above the Maximum Operating Temperature Limit indicated on the front of this unit. This light has the advantage of catching your attention without having to scan or interpret the display.

This unit also comes with an External Warning Control Line. This line can be connected to an external light in a control panel or mounted in front of the pilot. This control line will turn on the external light any time the CHT exceeds the Maximum Operating Temperature Limit indicated on the front of this unit.

2. Cautionary Temperature Range (Yellow Line):

Although operating your engine in this temperature range is approved, prolonged operation may cause excessive engine wear. The Cautionary Temperature Range extends from the “CAUTION” to “MAX. LIMIT” indicated on the front of this instrument.

3. CHT Operation:

The Cylinder Head Temperature (CHT) instrument helps the pilot protect his engine against the threat of excessive heat. Most general aviation aircraft monitor the hottest CHT as determined by extensive flight tests done by the airframe manufacture. Minimum in-flight CHT should be 150°F, and maximum in most direct drive normally aspirated Avco Lycoming engines is 500°F. Some of the higher powered, more complex engines have a limit of 475°F. Although these are minimum and maximum limits, the pilot should operate the engine at more reasonable temperatures in order to achieve the expected overhaul life of the powerplant. It would be normal during all-year operations in climb and cruise to see cylinder head temperatures in the range of 350°F to 435°F.

Sudden cooling of the CHT (known as shock cooling) is a problem that is common with aircraft engines. This is caused by fast descents with little or no power and rich mixtures. This may result in bent pushrods due to exhaust valves sticking, burnt valves, spark plug fouling, broken piston rings, cracked cylinders at the spark plug and valve ports and warped exhaust valves. To avoid these problems, do not allow the CHT to cool more rapidly than 1°F every 3 seconds during in-flight operation. This can be easily detected with our 1°F digital display.

During climbs, the cylinder head temperatures will rise rapidly until the heat absorbed by the combustion walls is dissipated out the engine's cooling fins. At this point, the CHT will stabilize. Any change in throttle, mixture, cowl or airspeed will affect the CHT and the rate at which it will change. Since rate and trend information can be easily interpreted from our digital display, changing any one of these parameters to stabilize, slow or reduce the CHT is possible with almost immediate results. Our digital instrument takes the guesswork out of controlling your CHT.

4. CHT Diagnostics:

The source of heat in an engine is from the combustion of the fuel/air mixture producing temperatures of approximately 4000°F. Some of this heat energy goes into heating the cylinder heads through radiation and conduction. This heat is sinked away from the engine by the air flow over the cylinder heads. When the heat being generated in the cylinder heads equalizes with the heat being sinked away, the cylinder head temperature will stabilize. If a problem arises in the combustion chamber or in the ability of the cooling system to sink away heat, the CHT's will be affected. To detect a problem, become familiar with your engine's CHT operating temperatures during run-up, climb, cruise and descent. Any differences from normal can be a sign of trouble.

Continuous change in the CHT can also be a sign of trouble. Because of the large thermal mass of the engine, the CHT's change slowly after the initial climb. Any continuous change in one or all of the CHT's after this initial climb can be the sign of trouble. The rate and trend of this change can easily be detected with Electronics International's 1°F resolution digital display. This information allows the pilot to make changes in flight attitude or engine operation and see the effects almost instantaneously.

INSTALLATION INSTRUCTIONS

1. Important Information and Initial Check Out:

_____ There is information in the Warranty that may alter your decision to install this instrument. _____

If you are not an FAA Certified Aircraft Mechanic familiar with the issues of installing aircraft TIT, EGT, and/or CHT instruments, Do Not attempt to install this instrument. The installer should use current aircraft standards and practices to install this instrument (refer to AC 43.13).

Check that the limit information on this instrument matches the engine manufacturer's published limits for your engine. The airframe manufacturer, AD's and/or STC's may set forth additional limitations on the operation of your engine.

Do not attempt to remove or replace the limit stickers on this instrument. If the limits for your engine do not match those which are marked on this instrument send this unit back to Electronics International Inc. for recalibration. DO NOT install or use a primary engine instrument that is not properly calibrated for your aircraft.

Read the entire Installation Instructions and resolve any issues you may have before starting the installation. This may eliminate any delays once the installation is started.

Acquire all the parts necessary to install this instrument before starting the installation.

Check that the instrument make and model are correct before starting the installation.

Before starting the installation make sure the unit will fit in the location you intend to install it without obstructing the operation of any controls.

If this instrument is to replace an existing unit in the aircraft, it is the installer's responsibility to move or replace any existing instruments or components in accordance with FAA approved methods and procedures. The following Installation Instructions do not cover moving or the removal of any existing instruments or components.

2. CHT Probe Installation:

Most engines have a port just below the lower spark plug for the CHT probe. Replace your existing Primary CHT probe with one of Electronics International's CHT probes. It is important to install the same type of CHT probe as was removed from the engine. A bayonet and screw-in type probe may be interchanged. Your current CHT probe was installed in the hottest cylinder determined by extensive flight testing. If you suspect your current probe was not installed on the correct cylinder or the probe type is incorrect, contact your airframe service department for this information.

3. TIT Probe Installation:

Electronics International offers a variety of TIT probes. The following describes the steps for installing each of these probes.

Remove the existing TIT probe and drill this hole out using a 13/64 inch drill bit. This will insure easy installation and removability of the probe. Insert the EGT probe and tighten the hose clamp. As the hose clamp is heated and cooled it will become loose as it conforms to the exhaust stack. After the first 10 hours of operation, retighten this clamp.

This probe has an adjustable depth so it can be adjusted for any application, but it can only be adjusted once. Once the ferrule has been compressed, the probe depth cannot be changed. Perform the following steps:

Remove your current TIT probe and check that your E.I. probe and compression fitting will fit and work properly. E.I. offers three screw-in TIT probes (1/8" NPT, 1/4" NPT and 7/16" - 20).

Determine the correct depth the probe sheath should extend beyond the compression fitting. Do this by checking it against your current TIT probe (1" is standard).

Set the compression fitting by tightening the cap into the body using a wrench.

4. Install your E.I. TIT probe into the exhaust stack and tighten.

4. EGT Probe Installation:

Look at each exhaust stack and determine the best location at which all of the EGT probes can be mounted at the same distance down from the exhaust ports. The ideal location is 1 1/2", but ease of installation should prevail. Drill a 13/64" diameter hole in each exhaust stack. Insert the probe and tighten the hose clamp. As the hose clamp is heated and cooled, it will become loose as it conforms to the exhaust stack. After the first 10 hours of operation, each hose clamp should be retightened.

IMPORTANT NOTE: For Cessna 210's or any aircraft using a slip joint in the exhaust system, install the EGT probes ABOVE OR BELOW THE SLIP JOINT. Installing a EGT probe in the slip joint can damage the probe.

5. Route the Extension Cables:

Mark both ends of each cable with the appropriate cylinder and/or probe type. Plug each probe into its associated extension cable. _____ When tie wrapping these cables down, be sure there is no strain or pulling on the cable against the probe housing. Each probe should have 3 to 4 inches of slack to allow the engine to move in its mount without breaking any wires. Also, there should be a tie wrap near the probe connectors. Dress each cable up to the instrument or remote switch keeping them away from any hot areas (exhaust stacks, cylinder heads, etc.).

We do not recommend removing the connectors when installing the extension cables but if you must shorten the cable, pull any excess cable length through the fire wall and cut it off at this time. However, it is recommended you leave some extra wire length under the instrument panel for later modifications. Varying cable lengths will ___ affect the accuracy of this instrument so cables of any length may be ordered from the factory. The Extension Cables and probe wires are made of type K thermocouple wire that must not be substituted or extended with regular copper wire. Also, it is important these wires not be kinked (i.e., _____

Attach the appropriate connectors to the ends of each of the Extension Cables as described below:

Red Slip-on Connectors


Strip the overbraid back 3 1/2". Be careful not to nick the wires.

Shrink a piece of 1" heat shrink over the cut portion of the overbraid.

Split the two wires back 3". Be careful not to nick the wires.

Strip each wire and double the wires over. _____

Place a male connector on the red wire and a female connector on the yellow wire. Double crimp these connectors. A good crimp is very important. Poor crimps will cause jumpy readings and are the biggest source of problems.

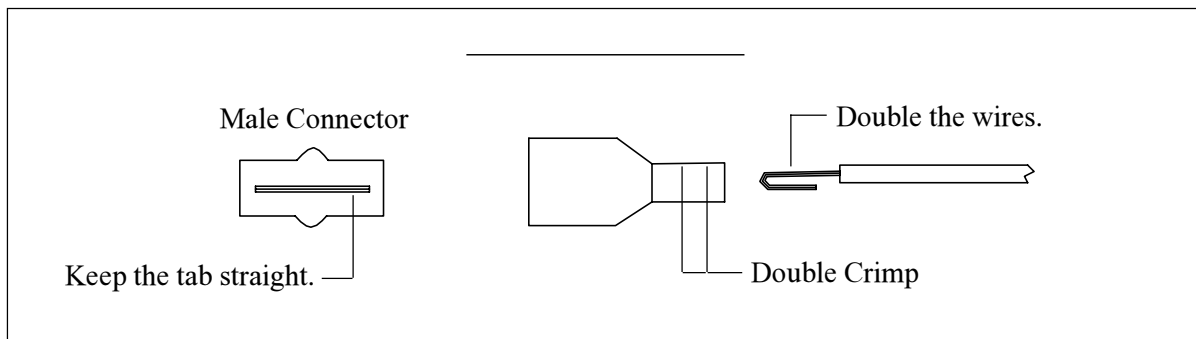

Tie off any excess cable under the instrument panel. Be sure these cables do not obstruct the freedom of travel of any controls. Cable length does not affect the accuracy of our units, so cables of any length may be ordered from the factory.

6. Hook-Up Connecting Wires:

Connect the red wire supplied in the kit to the 12 or 24 volt bus via a 1 amp fuse or circuit breaker (see the Wiring Diagram at the back of this manual). Connect the black wire supplied in the kit to ground. Connect the white/violet and/or white/gray wires as shown in the Instrument Wiring Diagram at the back of this manual.

Tie off any excess cable under the instrument panel. Be sure these cables do not obstruct the freedom of travel of any controls.

7. Connect and Install the Instrument and/or Remote Switch:

Connect the extension cables and all other wires to the instrument and/or remote switch as shown in the appropriate wiring instructions at the back of this manual. . Install the unit from behind the instrument panel using 6 x 32 screws. These screws must not be longer than .4 inches. Install the remote switch through a 1" square hole cut into the aircraft instrument panel. Tie wrap cables as needed. Be sure these cables do not obstruct the freedom of travel of any controls.

Only the following configurations are approved when using a Primary Remote Switch with one of E.I.'s Primary Instruments:

The TIT input must be connected to the channel marked "Primary" on the remote switch. The numbered channels should be connected to EGT inputs only. It is not allowed to mix the TIT display with any other function (i.e., CHT, Carb Temp, OAT, etc.) except EGT.

The primary CHT input must be tee'd into the channel marked "Primary" and into the appropriate numbered channel on the remote switch. The rest of the CHT inputs should be connected to the appropriate numbered channels on the remote switch. It is not allowed to mix the CHT display with any other function (i.e., TIT, EGT, Carb Temp, OAT, etc.).

8. System Ground Test:

Turn the master switch on and look for a near ambient temperature reading on each channel. If the instrument does not power-up (display a reading), check the power and ground leads (red and black leads) for an open, loose or poor connection.

2. Probe Check Out:

There are two good methods of testing a probe. Perform one or both of the following:

A probe can be tested with an ohmmeter. Disconnect the probe from the Extension Cable. When testing the resistance between the connectors, the probe should measure a “short” (less than 5 ohms). When measuring from one lead (either lead) of the probe to the probe sheath (metal tip), there should be an “open” (10k or greater).

Another method of checking a probe is to plug the suspected bad probe into a channel that is working properly. If the problem follows the probe, you have a defective probe.

3. Extension Cable Check Out:

With the Extension Cable connected to the unit, remove the probe from the suspected bad Extension Cable. Set the unit to the proper channel and look for a near cabin temperature reading on the display. A very high or low reading indicates a short to ground in the cable. Next, connect an ohmmeter, set to 10K range, to the open probe ends of the suspected bad Extension Cable. Set the unit to the proper channel and look for a very high (+ or -) reading on the digital display. A near cabin temperature reading or no change in reading indicates an open in the cable or its connectors. Also, look for a reading on the ohmmeter around 12K ohms. Most problems of this kind are usually one of the following:

_____ When plugging the probe into the extension cable it is possible to get the tab on the male connector to wedge between the red nylon and metal receptacle in the female connector. This connection may work for a few weeks or even months and then you will start to see jumpy readings. Disturbing the connection, without actually fixing it, may get it to work for a short time and then the problem will reappear. Physically check your connections at the probe for a proper mate.

_____ The female slip-on connector between the extension cable and probe can become loose if the connector has been used many times. This loose connection may work for a few weeks or even months and then you will start to see jumpy readings. A good connection is difficult to pull apart. If your connector is loose it can be tightened using a pair of needle nose pliers. Check your connectors at the probe for a good tight connection.

_____ This is usually only a problem if you have removed the connectors and replaced them. This connection may work for a few weeks or even months and then you will start to see jumpy readings. To check a crimp, give a sharp pull on the wire and connector. The wire should be tight in the crimp (no movement). When putting a new connector on a wire, double the wire over and put two tight crimps on the connector.

SPECIFICATIONS and OPERATING FEATURES

S0912941

9/12/94

(Temperature Monitoring Instruments) C-1P, T-1P, E-1P, CC-1P, EE-1P, EC-1P, TT-1P, TC-1P.

C-1P, T-1P, E-1P - 7 oz. (unit only)

EE-1P, CC-1P, EC-1P, TC-1P - 11.2 oz. (unit only)

6' T.C. Cable - 2 oz. (20' T.C. Cable = 7 oz.)

TIT or CHT Probe - 1.6 oz.

Meets TSO C43a

7.5 to 30 Volts, 1/10 Amp.

LCD's (viewable in direct sunlight), with 12 and 24 volt backlight control wires.

This light comes on when the displayed temperature exceeds the Max. Limit marked on the front of the instrument. This light will flash during power-up.

Grounds when the Over-Temp Warning Light is on. Current must be limited to 2/10 of an amp.

1999°F to -1999°F

1/2% in accordance with TSO C43a.

1°F (with enhanced stability and response circuits).

Type K, Ungrounded (for improved accuracy, stability and reliability).

Type K, any length or size (you may use your existing type K cables).

(Remote Switches) RS-5-1P, RS-5-2P, RS-7-1P, RS-7-2P, RS-2-2

RS-2-2P, RS-5-1P, RS-5-2P RS-7-1P- 3.2 oz. (unit only)

RS-7-2P - 4.9 oz. (unit only)

Meets TSO C43a


Gold

<50 milliohms

30 degrees


3.5 to 7.5 ounce-inches

Instrument Wiring Diagram

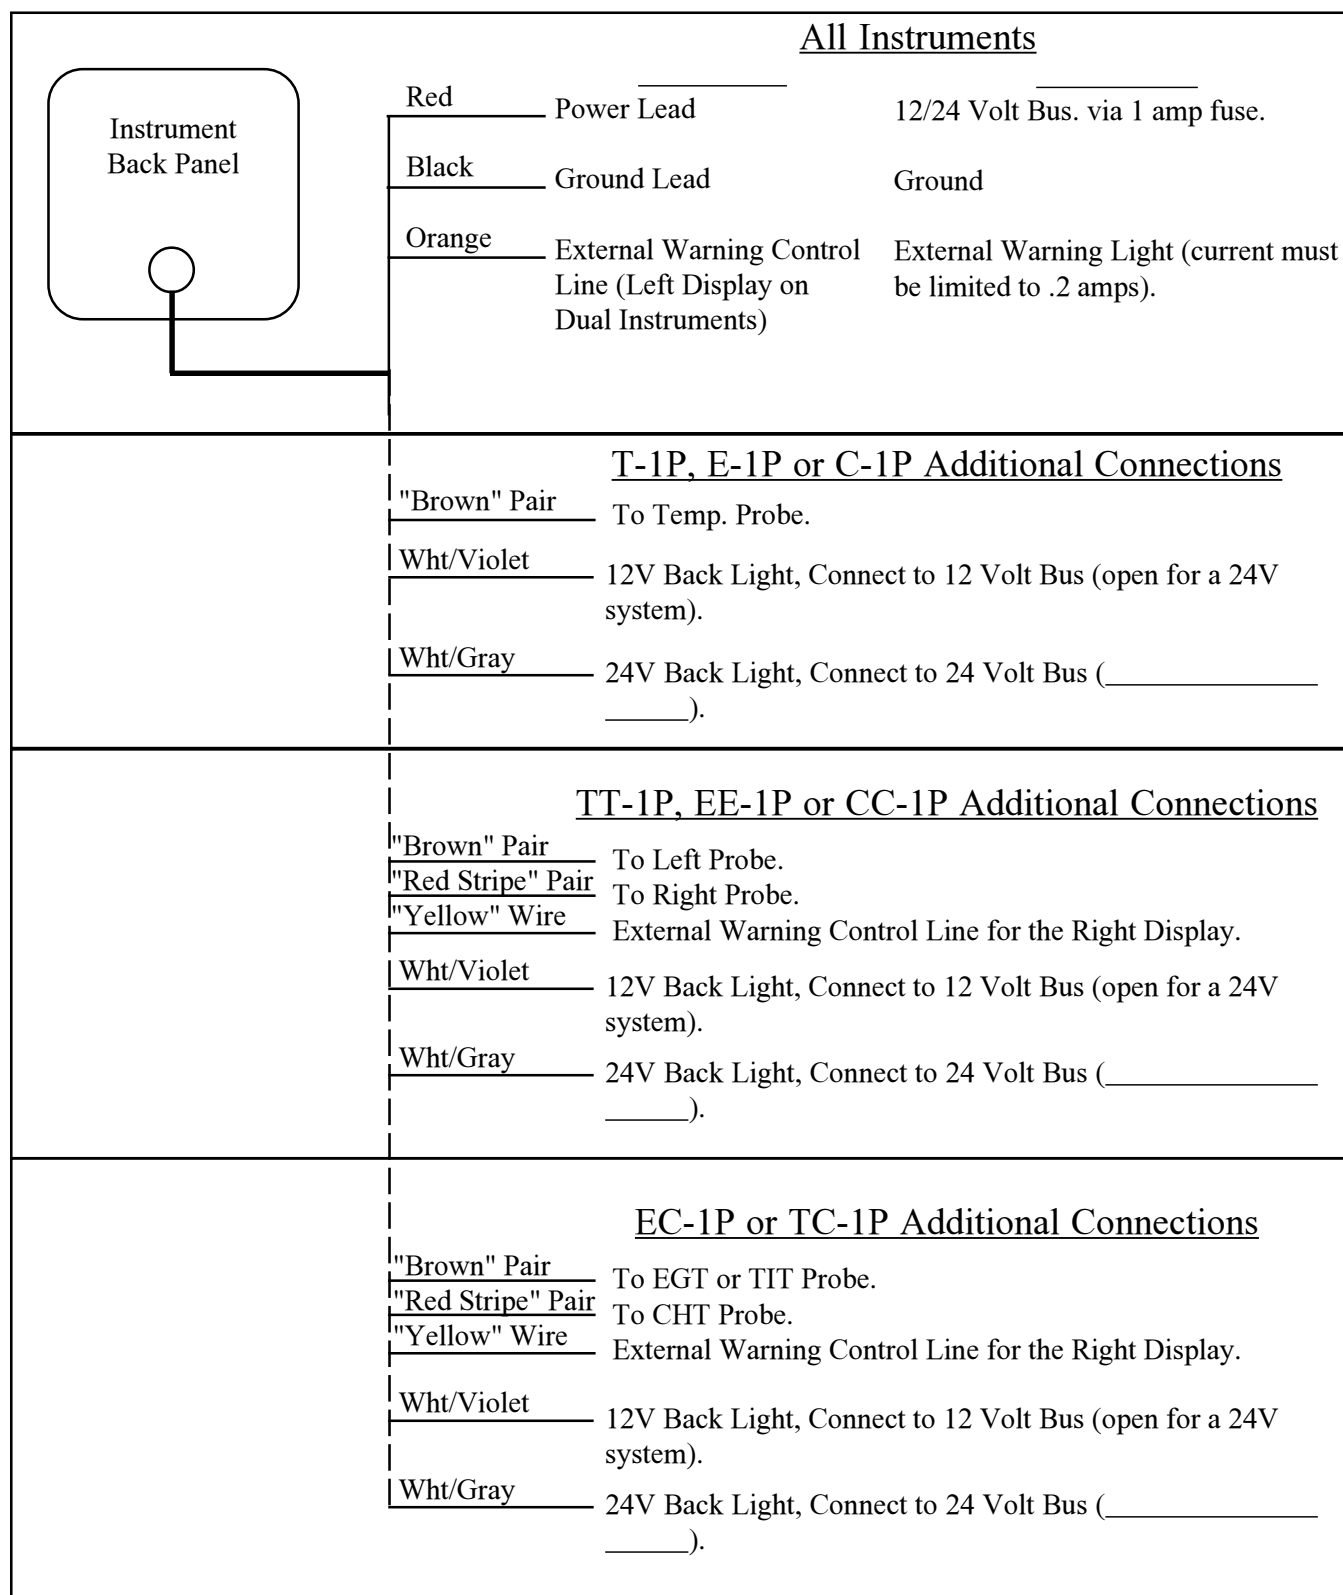

Remote Switch Connected to a Primary TIT Channel

This configuration allows a primary TIT instrument to monitor one TIT and all the EGT's for a four or six cylinder engine.

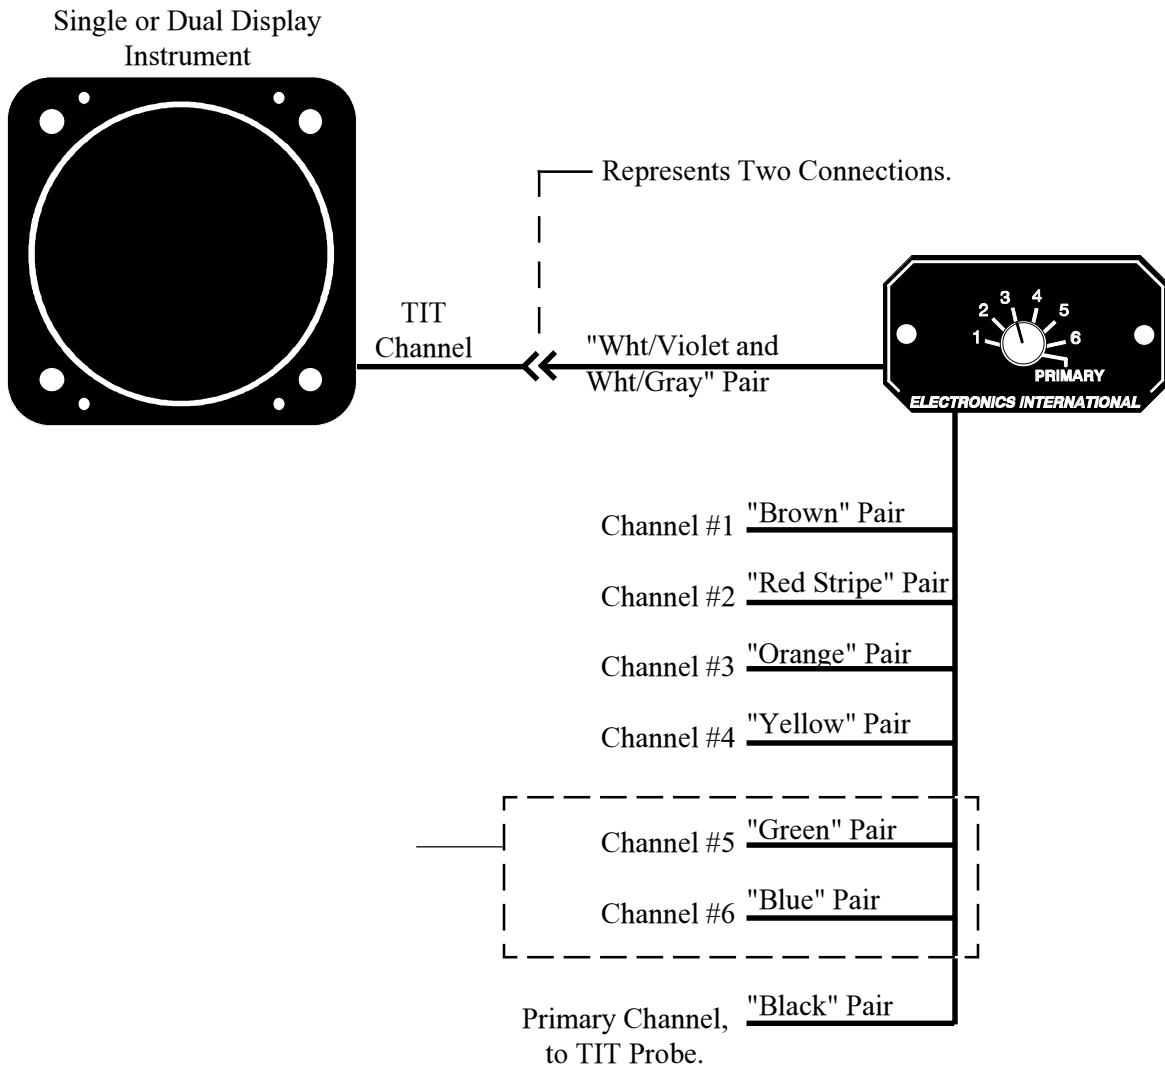


On the back of the RS-5-2P and RS-7-2P there are two groups of the above wires. When one of these switches is used with an Electronics International Dual Display Instrument they can simultaneously select the following:

1. Right and Left TIT and EGT's for a twin engine aircraft.
2. Right and Left CHT's for a twin engine aircraft.
3. TIT, EGT's and CHT's for a single engine aircraft.

Remote Switch Connected to a Primary CHT Channel

This configuration allows a primary CHT instrument to monitor all the CHT's for a four or six cylinder engine. This diagram shows cylinder #3 as the primary CHT. _____

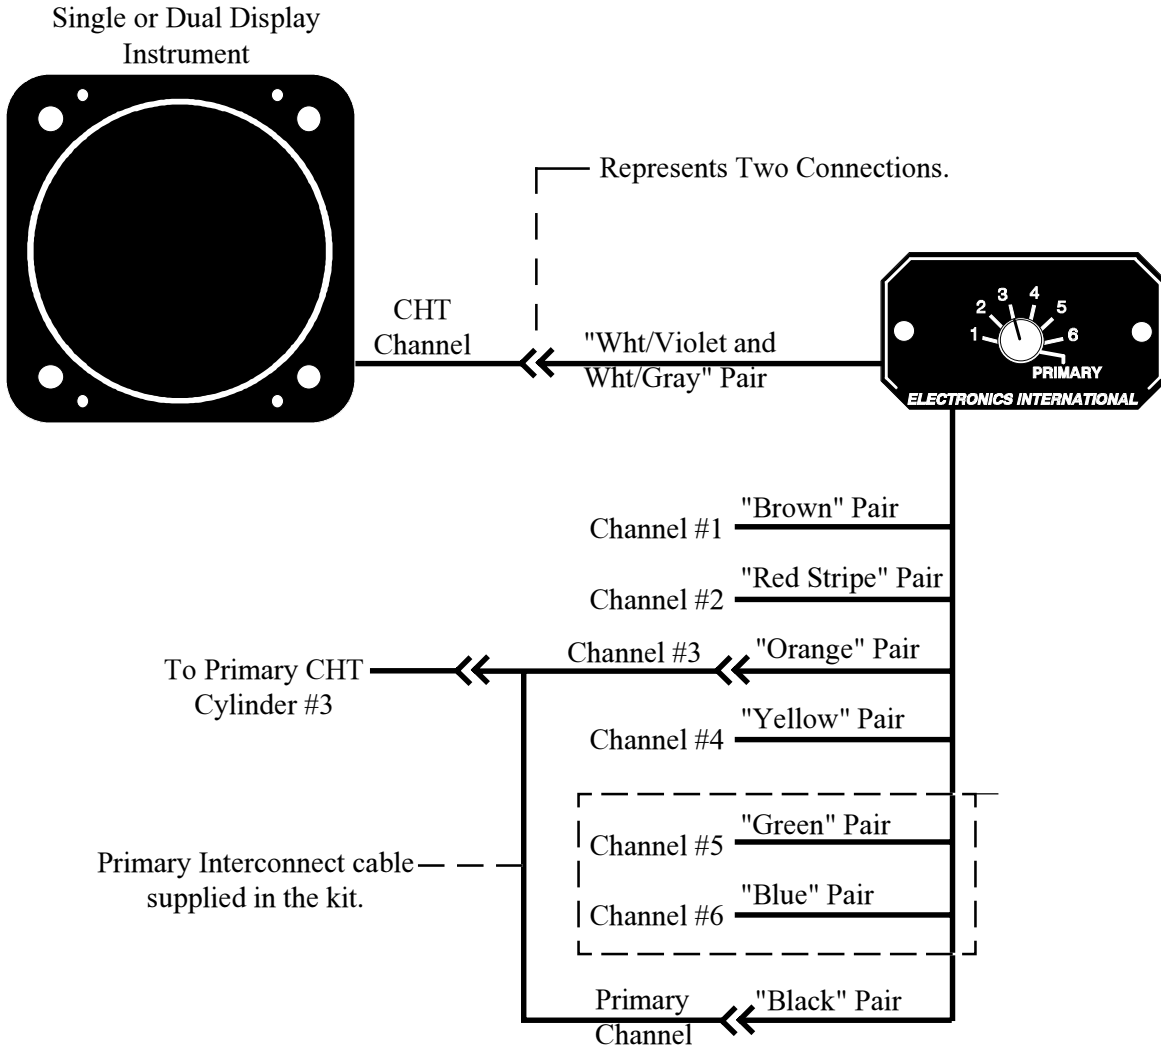

On the back of the RS-5-2P and RS-7-2P there are two groups of the above wires. When these switches are used with one of Electronics International's Dual Display Instruments they can simultaneously select the following:

1. Right and Left TIT and EGT's for a twin engine aircraft.
2. Right and Left CHT's for a twin engine aircraft.
3. TIT, EGT's and CHT's for a single engine aircraft.