



Important Installation Information

0720921



☞ All steps must be read before installing a probe. ☞

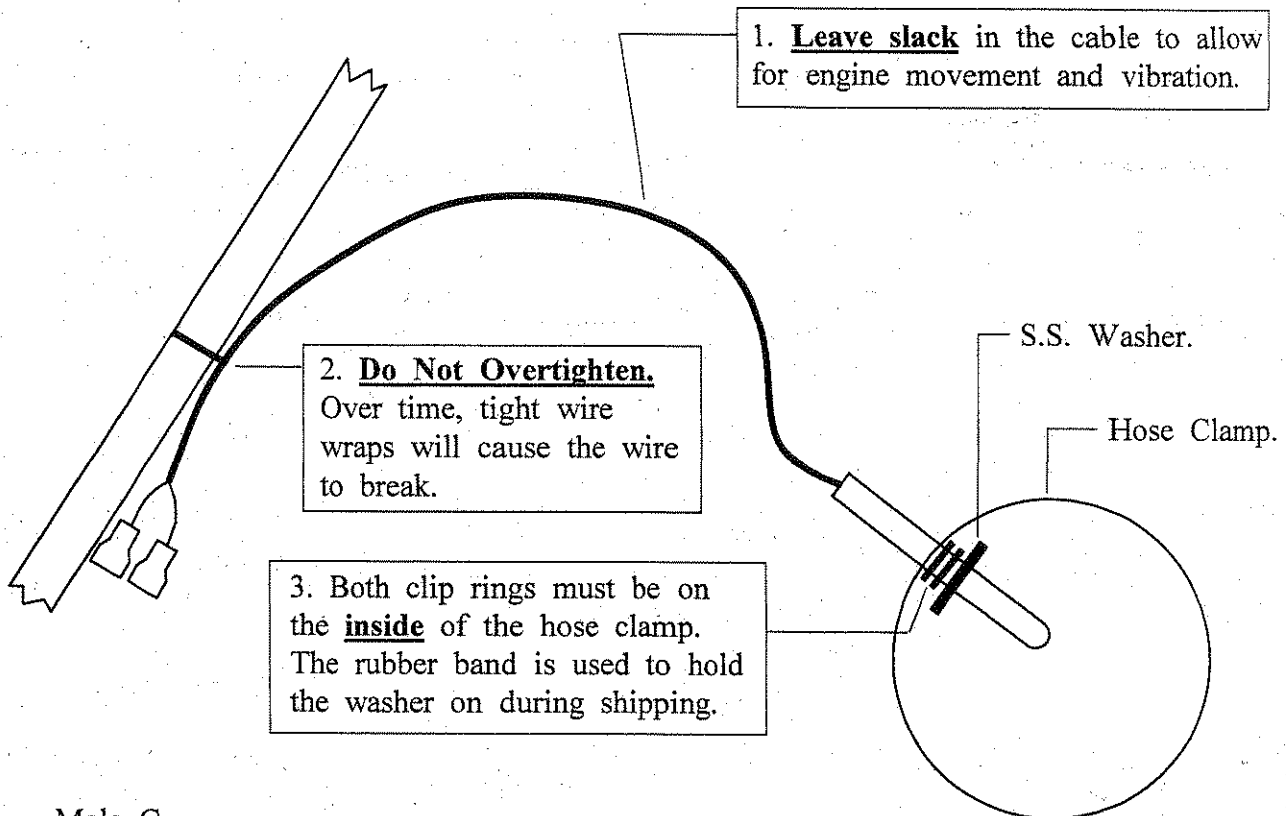

Male Conn.

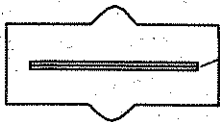

4. The tab inside the male connector must be centered (not bent up or down) to mate properly. Check each connector before installation. **Two drops of oil on the connector will protect it from corrosion for many years.**

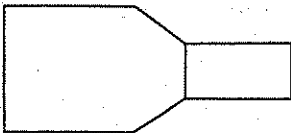

5. If you remove a connector, double over the wire before installing it into a new connector. Each connector must be double crimped very tightly.

6. If connectors have been disconnected several times the female connector may become loose. If this happens use a pair of needle nose pliers to retighten the female receptacle then mate the connectors.